

B&Q




























Assembly & Use Instructions Milan 3 Burner Gas BBQ

These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.



Parts Supplied







- Please note quantities of parts may vary according to model purchased.
- Please note the letter (P) in the description column denotes a preassembled part.






Ref	Description	Illustration	Qty	Ref	Description	Illustration	Qty
1	Hood - P (Handle - P)		1	15	Right Shelf		1
2	Hood Warming Rack		1	16	Left Rear Leg		1
3	Kebab Cooker		2	17	Left Front Leg		1
4	Cooking Grill		2	18	Right Rear Leg		1
5	Cooking Griddle		1	19	Right Front Leg		1
6	Vapour Bar		2	20	Left Shelf Bracket (Support - P)		1
7	Spring Clip - P		3	21	Right Shelf Bracket (Support - P)		1
8	Burner - P		3	22	Rear Brace		1
9	Barbecue Body - P		1	23	Trolley Base		1
10	Drip Tray		1	24	Caster Bracket		4
11	Drip Pan		1	25	Electronic Ignition Assembly		1
12	Liner		1	26	Screen		1
13	Hose/Regulator Assembly		1	27	Grill Cover		1
14	Left Shelf		1				

Tools Required (not supplied)

- Cross Head Screwdriver
- Adjustable Spanner

Fixings Supplied

Ref	Description	Illustration	Qty
28	Trolley Bolt, M6x15		26
29	Side Shelf Bolt, M6x20		8
30	Body Secure Bolt, M6x70		2
31	Trolley Bolt, M6x75		8
32	Body Support Bolt, M6x75		8
33	Spacer		10


Ref	Description	Illustration	Qty
34	Wing Nut, M6		8
35	Washer		8
36	Side Shelf Spacer		8
37	Hex Nut, M6		10
38	ST4.0x10 Screw		8

Tools Required (not supplied)

- Cross Head Screwdriver
- Adjustable Spanner

Hardware Reference Diagram: Milan 3 Burner

Specifications subject to change without prior notice.

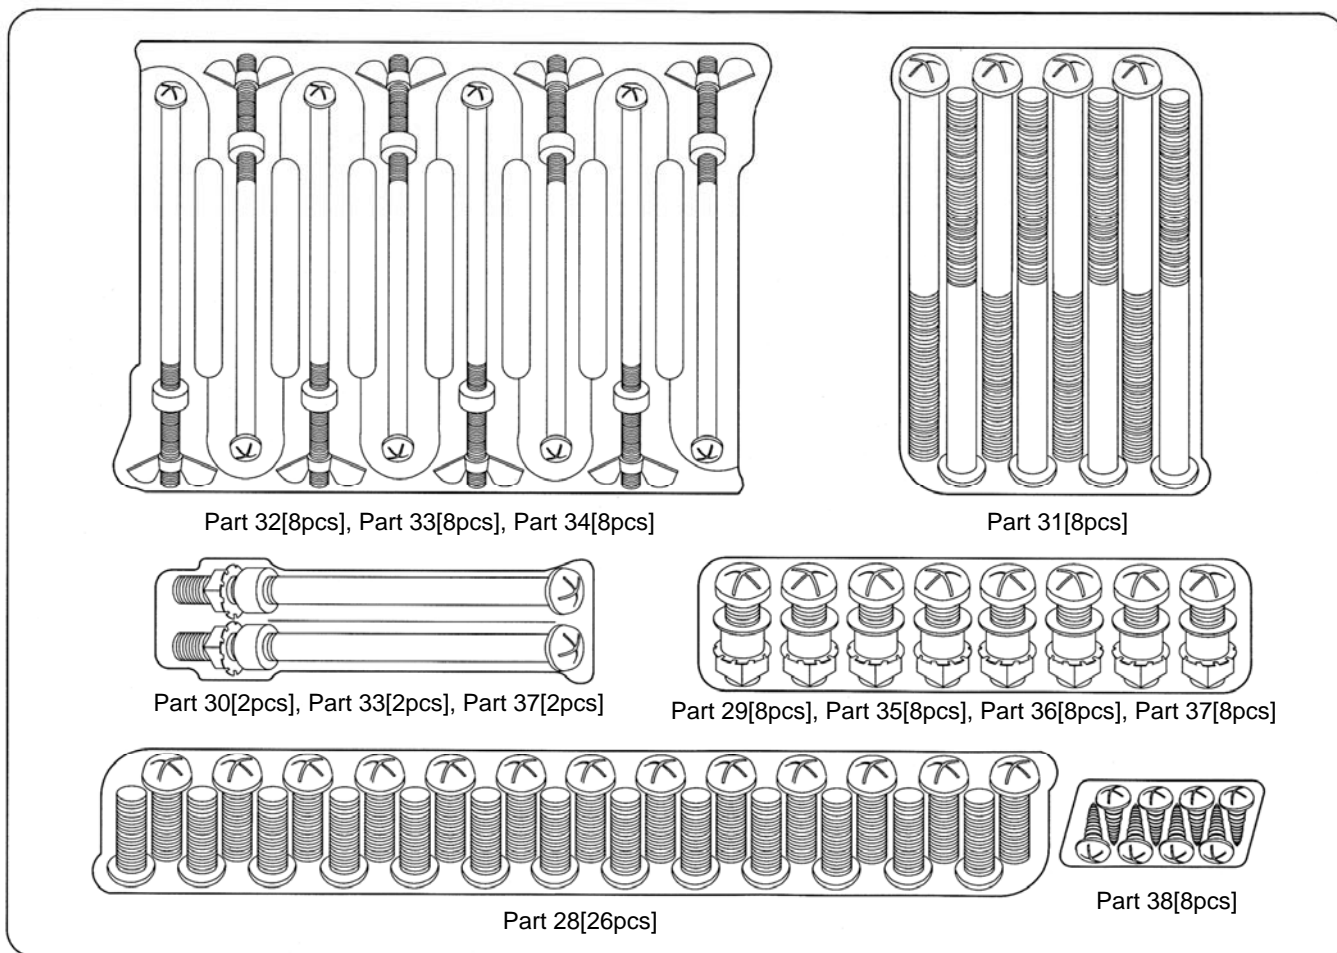


Before You Start

- Check the box and make sure you have all the parts and fittings listed. If not, contact your local B&Q store or the Helpline 0870 2427164 who will be able to help you.
- When you are ready to start, make sure that you have the right tools at hand, plenty of space and a clean dry area for assembly.

Assembly

- Please lay out all nuts and bolts and check lengths before assembling. It is recommended that the carton is cut open and spread out on the floor and used as a protective surface during assembly. Refer to the assembly diagrams as necessary.
- Important - Whilst every care is taken in the manufacture of this product, care must be taken during assembly in case sharp edges are present.
- Remove all transit packaged parts from the inside of the grill body before assembling.

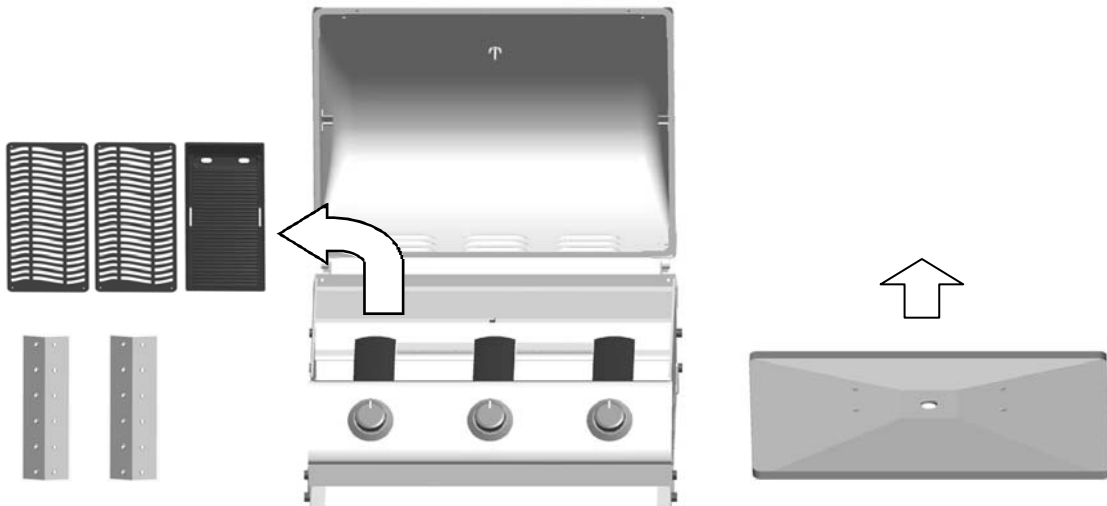

- This product is for **OUTDOOR USE ONLY**.
- **NEVER** use indoors, in an enclosed area or below ground level.
- This barbecue is intended for use with LPG bottled gas only. (A regulator of 28mbar must be used for Butane gas or 37mbar for Propane gas.)
- This appliance has been supplied with a **PROPANE REGULATOR** (only use with Propane gas).
- **NEVER** use an adjustable regulator with this barbecue.

Trolley Assembly



[16] Left Rear Leg, x1



[18] Right Rear Leg, x1



[24] Caster Bracket, x4



[28] Trolley Bolt, M6x15, x8



[17] Left Front Leg, x1



[19] Right Front Leg, x1



[23] Trolley Base, x1





[31] Trolley Bolt, M6x75, x8

1



Attach the Left Front (17) and Left Rear (16) legs to the Trolley Base (23) using the Trolley Bolts[M6x75] (31) as shown.

Repeat the above step to assemble the Right legs.

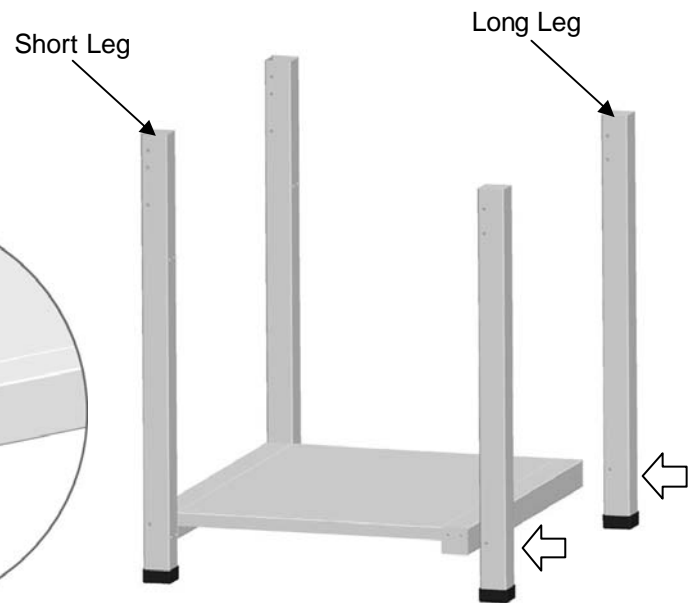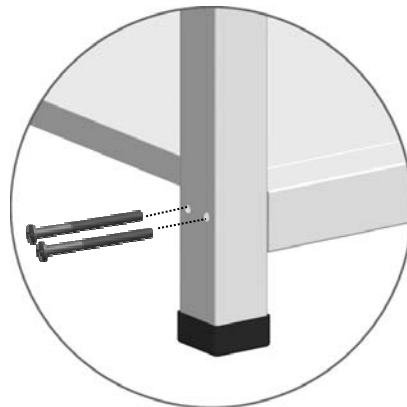

2

Attach the Caster Brackets (24) to the Legs using the Trolley Bolts[M6x15] (28) as shown.

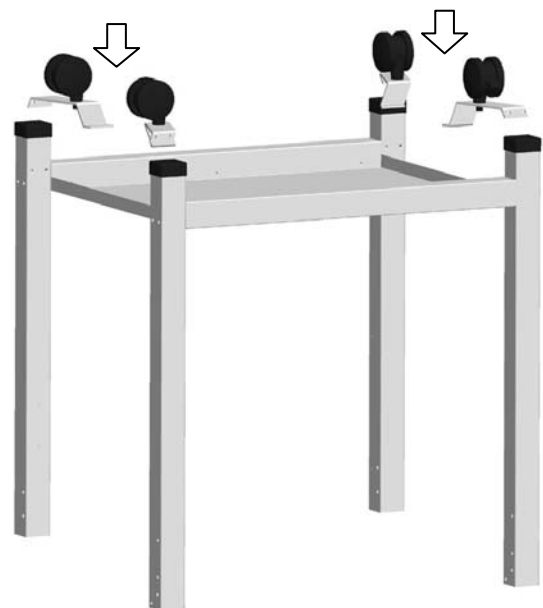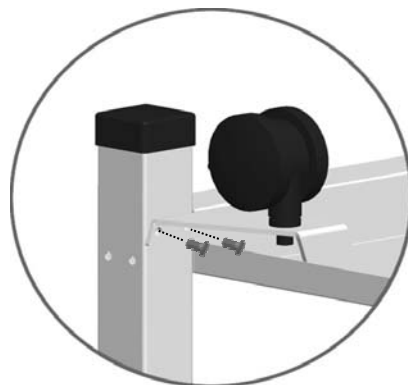

Trolley Assembly



[22] Rear Brace, x1



[20] Left Shelf Bracket/Support - P, x1





[21] Right Shelf Bracket /Support - P, x1



[28] Trolley Bolt, M6x15, x18



3

Attach the Rear Brace (22) to the Left/Right rear legs using the Trolley Bolts[M6x15] (28) as shown.

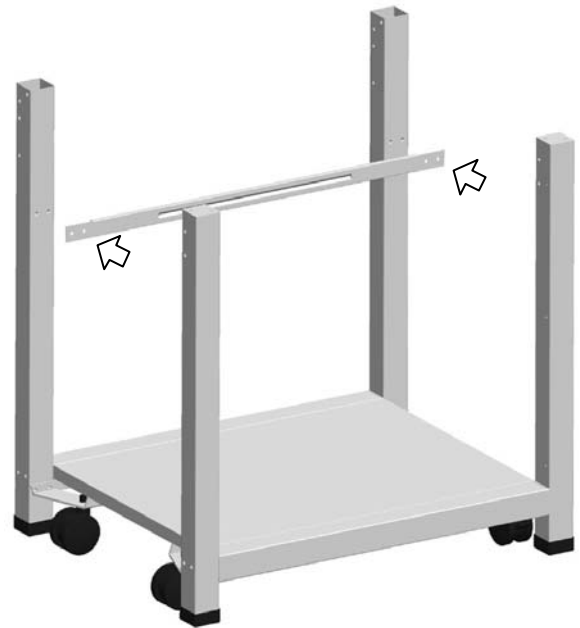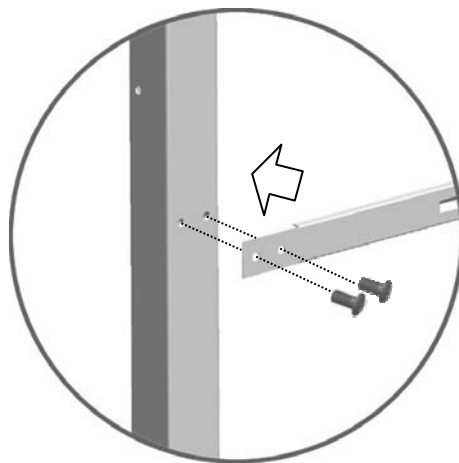

4

Attach the Left/Right Shelf Bracket/Support (20,21) to the front/rear legs with the Trolley Bolts[M6x15](28) as shown.

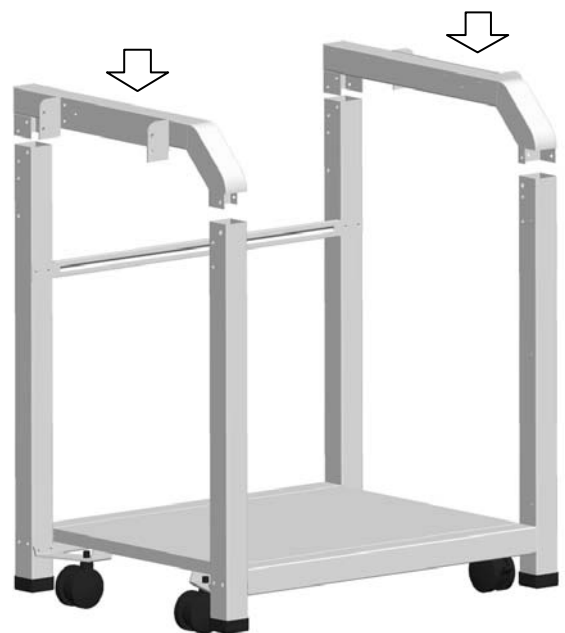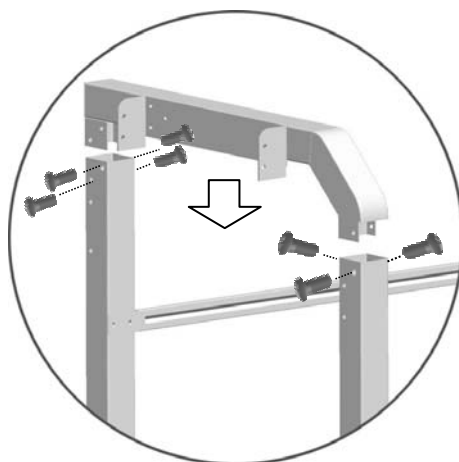

Trolley Assembly



[14] Left Shelf, x1



[15] Right Shelf, x1



[34] Wing Nut, x8



[33] Spacer, x10



[32] Body Support Bolt, M6x75, x8



[30] Body Secure Bolt, M6x70, x2



[36] Side Shelf Spacer, x8



[37] Hex Nut, x10



[35] Washer, x8




[29] Side Shelf Bolt, M6x20, x8

5


Insert 8 Body Support Bolt [M6x75] (32) through 4 legs, Spacers(Front and Back Legs)(33). 2 Body Secure Bolts[M6x70] (30) through the side walls of the body and spacers (33). Put down the body slowly (Two people required). Secure with Wing Nut (34) and Hex Nut (37). Do this until all 8 bolts are in place correctly.

IMPORTANT – Ensure spacers are assembled between side shelf and body. Failure to do this could result in barbecue being damaged by fire or heat transference.

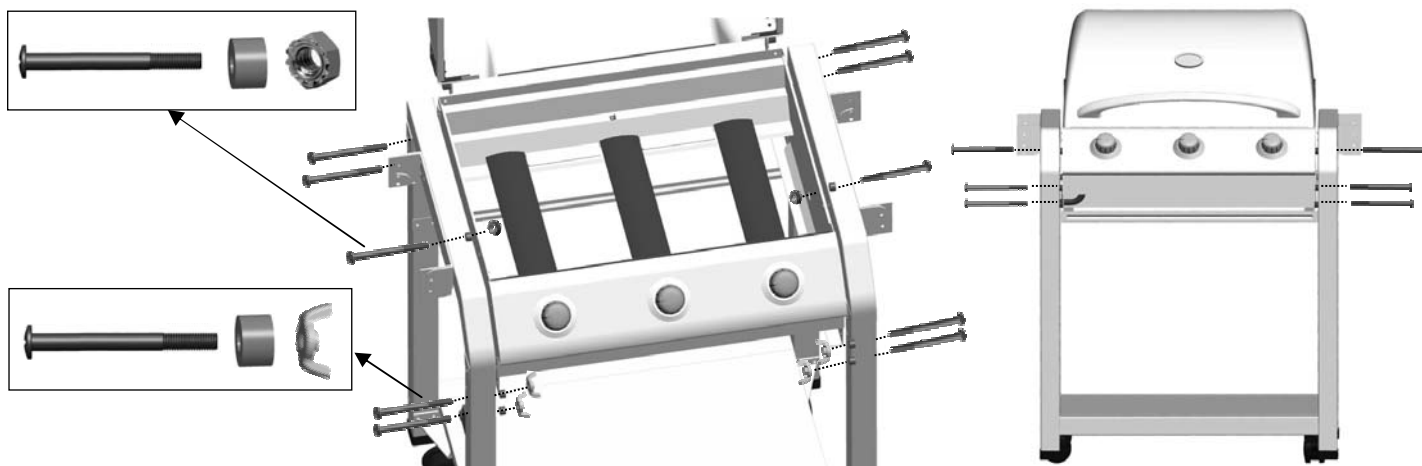

6

Attach the Side Shelves (14,15) to trolley using the Side Shelf Bolts (29), Washer (35) and Spacers (36) and secure with the Hex Nuts (37) as shown. **ASSEMBLE SIDE SHELVES IN FOLDING POSITION.**

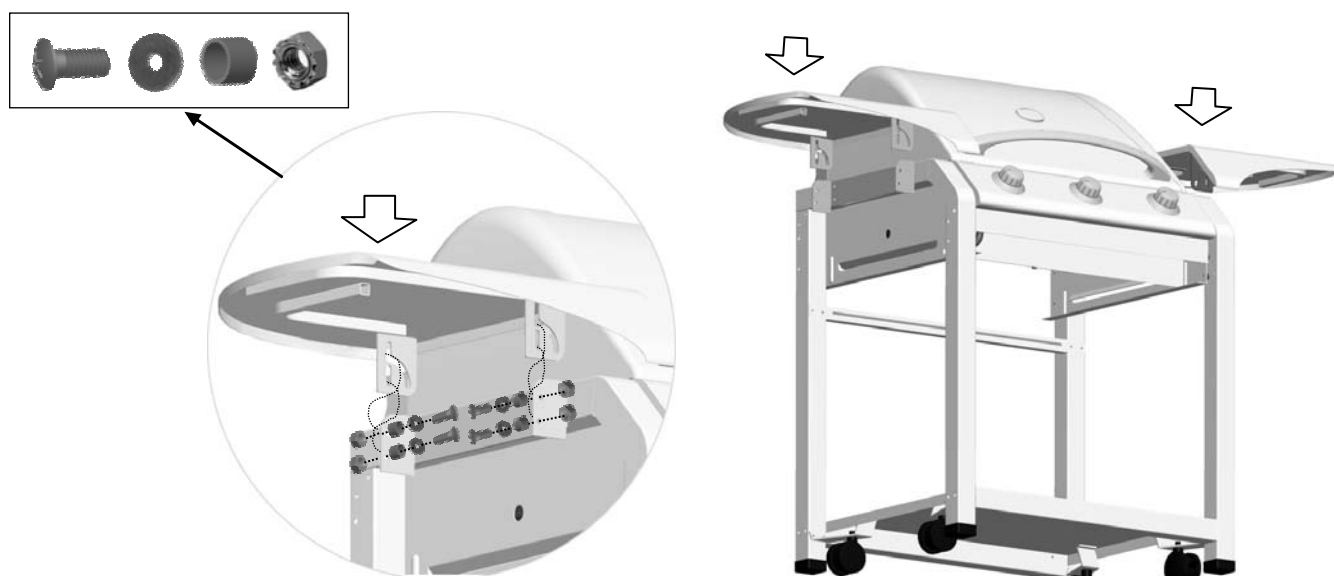

Body / Grill Assembly



 
[4] Cooking Grill, x2



[5] Cooking Griddle, x1



[6] Vapour Bar, x2



[2] Hood Warming Rack, x1




[3] Kabab Cooker, x2

7

Lay Vapour Bars (6), Cooking Grills (4), Cooking Griddle (5) as shown.

Note: Place the vapour bar onto the pre-assembled pins.

Note: The cooking grills must be located over the vapour bars.

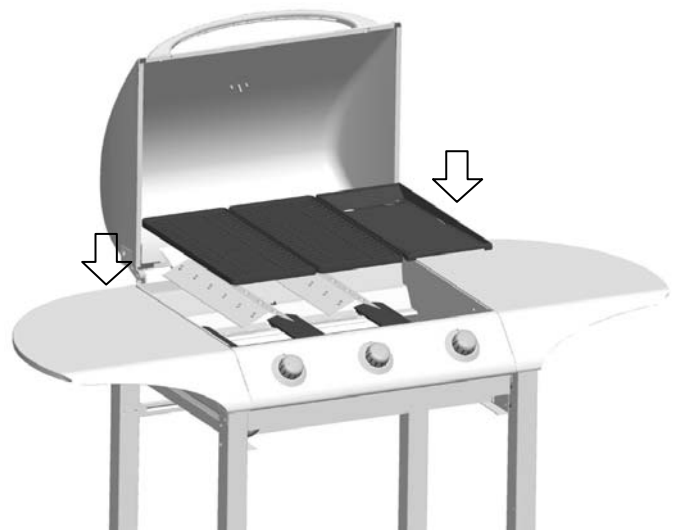

8

Attach the Kabab Cooker (3) to the cooking grill as shown.

Lay the Warming Rack (2) to barbecue hood as shown.



Trolley / Grill Assembly



[10] Drip Tray, x1



[11] Drip Pan, x1



[12] Liner, x1





[25] Electronic Ignition Assembly, x1



[38] ST4.0 x 10 Screw, x2

9


Install the Electronic Ignition (25) and Shield to the left front leg with two ST4.0x12 Screws (38). Connect wires A, B and C to any of the terminals in the electrode box and Connect wires D to bottom terminals. Connect the black wires with the large lead clips which should connect to the terminal pair under terminals 1 and 3. Install the electronic ignition battery in the battery compartment, ensure the battery is placed as marked (+)(-).

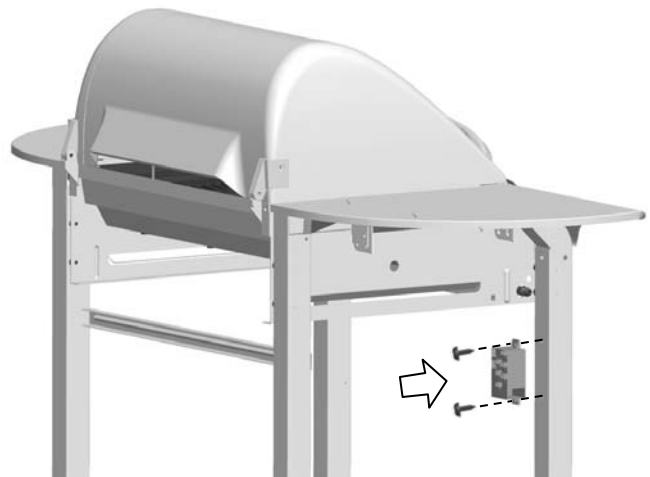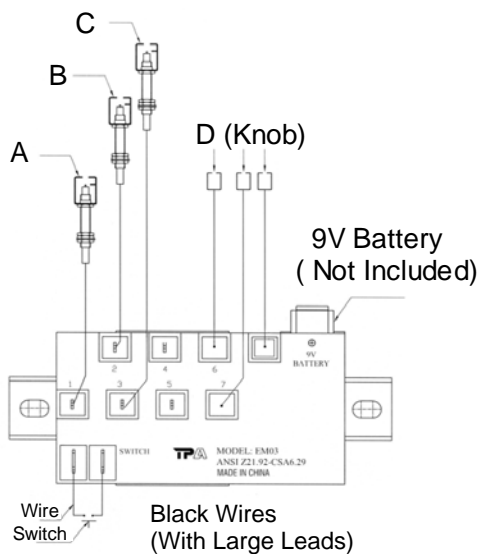

10

Insert the Liner (12) into the Drip Pan (11). Insert the drip pan into the bottom of the Drip Tray (10). Slide the drip tray into the bottom of the barbecue body.

NOTE: IMPORTANT-Follow the drip tray advice on Page 16.

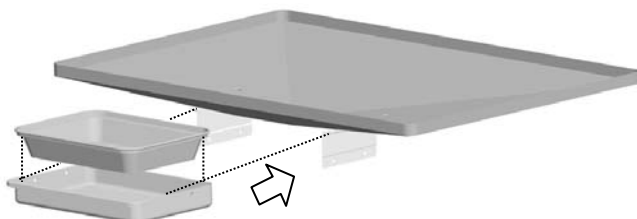

Grill Assembly



[13] Hose/Regulator Assembly, x1



[26] Screen, x1



[38] ST4.0 x 10 Screw, x6

11

IMPORTANT: Carefully screw the brass hex hose fitting onto the brass threaded gas inlet assembly.

IMPORTANT: Screw hand tight only. Then using a spanner turn the hex nut a further 1/8 of a turn to ensure tightened. (DO NOT OVERTIGHTEN – DO NOT USE ANY SEALING TAPE OR LIQUID ON THE CONNECTION.)

Attach the Screen (26) to Left/Right Front Legs using the ST4.0 x 10 Screws (38) as shown.



ASSEMBLY IS NOW COMPLETED.

**PROCEED TO THE NEXT PAGE FOR INSTRUCTIONS ON
OPERATION AND MAINTENANCE.
NOW GO TO LEAK TESTING SECTION BEFORE USE.**



Important- Please ensure the gas hose is free of kinks, twists and from its transit position.

Leak Testing

- To be performed in a well-ventilated area.
- Confirm all control knobs are in the off position.
- Open the gas control valve on the bottle or regulator.
- Check for leaks by brushing a solution of ½ water and ½ soap over all gas system joints, including all valve connections, hose connections and regulator connections.
- **NEVER USE AN OPEN FLAME** to test for leaks at anytime.
- If bubbles form over any of the joints, there is a leak.
- Turn off the gas supply and retighten all joints.
- Repeat test. If bubbles form again, do not use the barbecue. Please contact your local dealer for assistance.
- Leak test annually and whenever the gas bottle is removed or replaced.

Gas and Regulator

- This barbecue can use either propane or butane LPG bottled gas.
- Propane bottles, (patio gas green) will supply gas all year round, even on cold winter days.
- Butane bottles, normally blue, or BBQ gas will supply sufficient gas in summer. Butane gas must not be used in colder temperatures. Contact your local gas supplier for advice.
- The bottle should never be stood on the trolley base and placed directly under the barbecue.
- Gas bottles should never be stored or used laid on their side.
- Never store gas bottles indoors.
- For optimal performance, we suggest the following:

Model	Butane Minimum Bottle Size	Propane Minimum Bottle Size (Patio Gas)
Milan 3 Burner	15kg	13kg

- This barbecue is intended for use with LPG bottled gas only. (A regulator of 28mbar must be used for Butane gas or 37mbar for Propane gas.)
- This appliance has been supplied with a PROPANE REGULATOR (only use with Propane gas).
- NEVER use an adjustable regulator with this barbecue, not suitable for (red) commercial propane cylinders.
- Please contact your local gas supplier for advice on suitable gas bottles and regulators.

Siting Instructions

- This barbecue is for **OUTDOOR USE ONLY** and should be placed in a well-ventilated area.
- Take care to ensure that it is not placed **UNDER** any combustible surface.
- The sides of the barbecue should **NEVER** be closer than 1 metre from any combustible surface.
- Keep this barbecue away from any flammable materials!
- Important - Do not obstruct any ventilation openings in the barbecue body.
- Position the gas supply bottle on level ground next to the barbecue and safely away from any source of heat. Should you need to change the gas bottle, confirm that the barbecue is switched off, and that there are no sources of ignition (cigarettes, open flame, sparks, etc.) near before proceeding.
- Inspect the gas hose to ensure it is free of any twisting or tension. The hose should hang freely with no bends, folds, or kinks that could obstruct free flow of gas. Apart from the connection point, no part of the hose should touch any hot barbecue parts.
- Always inspect the hose for cuts, cracks, or excessive wear before use.
- If the hose is damaged, it must be replaced with hose suitable for use with LPG and meet the national standards for the country of use. The length of the hose shall not exceed 1.5m.
- N.B.-The date on U.K. orange hose is the date of manufacture, not the expiry date.

Connecting to the Cylinder

- Confirm all barbecue control knobs are in the off position.
- Connect the regulator to the gas bottle according to your regulator and bottle dealer's instructions.

Use Instructions

Before proceeding, make certain that you understand the **WARNINGS** section of this manual.

- Preparation before cooking - To prevent foods from sticking to the cooking grill, please use a long handled brush to apply a light coat of cooking or vegetable oil before each barbecuing session.
- Note: When cooking for the first time, paint colours may change slightly as a result. This is normal and should be expected.

Lighting the Barbecue

- Open the barbecue hood.
- Ensure all knobs are in the off position. Open the gas control valve on the gas bottle or regulator.
- Push in and turn the control knob of the burner anti-clockwise until you feel resistance to the turning. Pause 2-3 seconds and then continue to turn the knob to the high position until clicking sounds indicates the spark has ignited burners.
- If burner fails to ignite, turn control knob to the off position and turn gas off at the bottle or regulator. Wait five minutes, then repeat the above steps.
- If the burner fails to ignite after following above procedure, turn all the knobs to the off position. Close the gas valve on the gas bottle. Wait 5 minutes, then repeat the above steps. If the barbecue still fails to light, please refer to the manual ignition instructions in section below.
- After successful lighting, light each burner from left to right as desired.
- After ignition, the burners should be burned at the high position for 3-5 minutes in order to preheat the barbecue. This process should be done before every cooking session. **IMPORTANT** - The hood should be open during preheating.
- After completion of preheating, turn burners to the low position for best cooking results.

Manual Lighting Instructions

- Insert lit match through the match-lighting hole on the right side of the barbecue.
- Push and turn the right most control knob anti-clockwise to the high position.
- After successful lighting, light each burner from left to right as desired.
- If burner fails to ignite after repeated attempts, contact the helpline number stated in this manual.

Grill Cooking

The Vapour bar evenly distributes the burner flame across the cooking grill area. The natural food juices produced during cooking fall onto the hot vapour bar below and vaporise. Even cooking of food will be achieved by using the BBQ with the hood down. **This should only be done with the burners on low.**

Flare-Up Control

IMPORTANT— FLARE UPS CAN OCCUR FROM RESIDUE FAT AND JUICES DRIPPING ONTO THE BURNERS AND HOT VAPOUR BAR. To reduce this regularly clean the burners and vapour bar. To control flare-up, it is advisable to trim away excess fat from meat and poultry before grilling. The burners should always be placed on the low setting during cooking. Always protect your hands when handling anything near the cooking surface of the barbecue.

End of Cooking Session

After each cooking session, turn the barbecue burners to the “high” position and burn for 5 minutes. This procedure will burn off cooking residue, thus making cleaning easier.

Turning Off Your Barbecue

When you have finished using your barbecue, turn all the control valves fully clockwise to the “Off” position, then switch off the gas at the bottle. Wait until the barbecue is sufficiently cool before closing the hood.

Care and Maintenance

- Regularly clean your barbecue between uses and especially after extended periods of storage.
- Ensure the barbecue and its components are sufficiently cool before cleaning.
- Do not leave the barbecue exposed to outside weather conditions or stored in damp, moist areas.
- Never douse the barbecue with water when its surfaces are hot.
- Never handle hot parts with unprotected hands.
- In order to extend the life and maintain the condition of your barbecue, we strongly recommend that the unit be covered when left outside for any length of time, especially during the winter months.
- **IMPORTANT** - We recommend that servicing of this appliance should be performed either after every 100 hours of use or annually, whichever is achieved soonest.

Cooking Grill

- **IMPORTANT**– Do not use metal barbecue tools. Only use wooden or plastic barbecue tools on the cooking surfaces.
- **IMPORTANT**- Clean with hot soapy water.
- To remove any food residue, use a mild cream cleaner on a non-abrasive pad. Some cleaning products may scratch or cause enamel cooking surface to flake and chip, only use a sponge or kitchen cloth when cleaning.
- Rinse well and dry thoroughly.
- We recommend coating surfaces with cooking oil before commencing cooking, this will help making cooking easier and cleaning of the grills after cooking has finished. Always clean cooking grills after use, do not allow food residue to sit on grills for long periods of time.
- Replacement grills can be purchased at store.
- The enamel surface on the cooking grill may dull/discolour after a period use.

Burner Maintenance

- In normal usage, burning off the residue after cooking will keep the burners clean.
- The burners should be removed and cleaned annually, or whenever heavy build-up is found, to ensure that there are no signs of blockage (debris, insects) in either the burner portholes or the venturi tubes.
- Use a pipe cleaner to clear obstructions.
- A wire brush can be used to remove corrosion from the burner surfaces.
- When refitting the burners, be careful to check that the venturi tubes of the burners fit over the valve outlets.

Drip Tray

- Regularly clean the drip tray, liner and pan of grease, fat residue. Do not allow to build up as this can result in fat fire.

Vapour Bar

- Clean the vapour bar with soap and warm water using a low abrasive cleaning cloth or sponge!

Barbecue Body

- Regularly remove excess grease or fat from the barbecue body with a soft plastic or wooden scraper.
- It is not necessary to remove all the grease from the body. If you need to clean fully, use hot soapy water and a cloth, or nylon-bristled brush only.
- Remove cooking surfaces and burners before full cleaning.
- Do not immerse the gas controls or manifold in water.
- Check burner operation after carefully refitting into body.

Fixings

- All screws and bolts, etc. should be checked and tightened on a regular basis.

Storage

- Store your barbecue in a cool dry place.
- Cover the burners with aluminium foil in order to prevent insects or other debris from collecting in burner holes.
- If the barbecue is to be stored indoors, the gas bottle must be disconnected and left outside. The gas bottle should always be stored outside, in a dry, well-ventilated area, away from any sources of heat or ignition.
- Do not let children tamper with the bottle.

Warnings

- This product is for **OUTDOOR USE ONLY**.
- **NEVER** use indoor, in an enclosed area or below ground level.
- This barbecue is intended for use with LPG bottled gas only. (A regulator of 28mbar must be used for Butane gas or 37mbar for Propane gas.)
- This appliance has been supplied with a **PROPANE REGULATOR** (only use with Propane gas).
- **NEVER** use an adjustable regulator with this barbecue.
- Failure to read and follow these instructions could result in serious injury or damage to property.
- This product will become hot when in use—take care when touching.
- Keep children and pets at a safe distance from the unit when in use.
- **DO NOT** move this product when in use.
- Always turn off the gas supply at the gas cylinder when not in use.
- Any modification of this barbecue may be dangerous.
- **DO NOT** leave this product unattended when in use.
- **DO NOT** position the gas cylinder on the lower shelf or direct beneath the barbecue—always keep the cylinder vertical.
- When igniting, always have the hood open.
- **ONLY** use barbecue on a flat **LEVEL** non flammable surface or ground.
- When positioning, ensure the unit is a minimum of 1 metre from flammable items or structure.
- **DO NOT** cook with the hood down when the control knobs set to 'HIGH' - this will damage your barbecue.
- This barbecue is not intended for use with charcoal or other similar fuel.
- Always leak test the unit - annually, when dismantled, when parts are replaced, or if the gas cylinder is removed or replaced.
- **DO NOT** use petrol, white spirit, lighter fluid, alcohol or other similar chemicals to ignite a barbecue.
- When storing the barbecue or gas cylinder, ensure they are away from flammable materials or liquids.
- The gas cylinder must not be stored next to this or any other appliance.
- Always follow care and maintenance instructions - regularly maintain your barbecue.
- **DO NOT** allow grease, fat or food residue to build on or in barbecue - **RISK OF FIRE**.
- Always replace worn parts- do not use barbecue if a leak, wear, or damage is found.
- Never overload the grill with food - evenly space over the cooking grill surface, ensuring sufficient air circulation to the burners.
- **DO NOT** store or cover the barbecue until fully cooled.
- This product is not suitable for use with Lava Rock.

Caution

- Regularly clean your barbecue after every use.
- If you smell gas—turn off the barbecue, extinguish all flames, open the barbecue hood. If the odour continues, immediately contact your gas supplier.
- In the event of an uncontrollable fire, immediately disconnect the gas cylinder moving it away from fire and contact the fire services. **DO NOT PUT YOURSELF AT RISK!**
- The use of oven gloves or mittens is recommended when handling hot surfaces.
- Ensure aerosols are not used near this unit when in use.
- Ensure all packaging and plastic bags are disposed of safely.
- **IMPORTANT**– Do not use abrasive cleaners or materials when cleaning enamel cooking grills or surfaces.
- **IMPORTANT**– Do not use metal barbecue tools on the enamel grills.

Food Cooking Information

Please read and follow this advice when cooking on your barbecue.

- **ALWAYS** wash your hands before or after handling uncooked meat and before eating.
- **ALWAYS** keep raw meat away from cooked meat and other foods.
- Before cooking ensure barbecue grill surfaces and tools are clean and free of old food residues.
- **DO NOT** use the same utensils to handle cooked and uncooked foods.
- Ensure all meat is cooked thoroughly before eating.
- **CAUTION** - eating raw or under cooked meat can cause food poisoning (e.g. bacteria strains such as E.coli).
- To reduce the risk of under cooked meat cut open to ensure it is cooked all the way through internally.
- **CAUTION** - if meat has been cooked sufficiently the meat juices should be clear in colour and there should be no traces of pink/red juice or meat colouring.
- Pre-cooking of larger meat or joints is recommended before finally cooking on your barbecue.
- After cooking on your barbecue always clean the grill cooking surfaces and utensils.

Technical Data

	CE Approval	Heat Input	Burners	Injector Size	Gas /Pressure
Milan 3 Burner	0359 359BP446	11.8kW	3	1.04mm	Butane/28mbar Propane/37mbar
Gas Consumption: 860g/hr					

Specifications are subject to change without prior notice.

This barbecue is specifically manufactured for B&Q Plc by:
TPA Metals and Machinery (Shenzhen) Co. Ltd.
Shenzhen, Guangdong Province, China

Fault Finding

Problem	Possible Cause	Solution
Burner will not light using the ignition system	LP gas cylinder is empty	Replace with full cylinder
	Faulty regulator	Have regulator checked or replace
	Obstructions in burner	Clean burner
	Obstructions in gas jets or gas hose	Clean jets and gas hose
	Electrode wire is loose or disconnected on electrode or ignition unit	Reconnect wire
	Electrode or wire is damaged	Change electrode and wire
Burner will not light with a match	Faulty pushbutton ignitor	Change ignitor
	LP gas cylinder is empty	Replace with full cylinder
	Faulty regulator	Have regulator checked or replace
	Obstructions in burner	Clean burner
Low flame or flashback (fire in burner tube— a hissing or roaring noise may be heard)	Obstructions in gas jets or gas hose	Clean jets and gas hose
	LP gas cylinder too small	Use larger cylinder.
	Obstructions in burner	Clean burner
	Obstructions in gas jets or gas hose	Clean jets and gas hose
	Windy conditions.	Use BBQ in a more sheltered position
Gas valve knob difficult to turn	Gas valve jammed	Replace gas valve

If you have any queries or require advice or spare parts for this product, please call the B&Q Customer Helpline Number 0870 2427164.